

The Capstone-RISC-V Instruction Set Reference

Table of Contents

1. Introduction	4
1.1. Properties to Support	4
1.2. Major Design Elements	4
1.3. Capstone-RISC-V ISA Overview	5
1.4. Assembly Mnemonics	6
1.5. Notations	6
1.6. Bibliography	7
2. Programming Model	8
2.1. Capabilities	8
2.2. Extension to General-Purpose Registers	11
2.3. Extension to Other Registers	13
2.4. Added Registers	14
2.5. Extension to Memory	15
2.6. Instruction Set	17
2.7. System Reset	17
3. Capability Manipulation Instructions	19
3.1. Cursor, Bounds, and Permissions Manipulation	19
3.2. Type Manipulation	24
3.3. Dropping	26
3.4. Revocation	27
4. Memory Access Instructions	29
4.1. Load Capabilities	29
4.2. Store Capabilities	31
5. Control Flow Instructions	33
5.1. Jump to Capabilities	33
5.2. Domain Crossing	34
5.3. World Switching	36
6. Control and Status Instructions	40
7. Adjustments to Existing Instructions	41
7.1. Memory Access Instructions	41
7.2. Control Flow Instructions	45
7.3. Illegal Instructions	46
8. Interrupts and Exceptions	47
8.1. Exception and Exit Codes	47

8.2. Exception Data	48
8.3. Handling of Secure-World Interrupts	49
8.4. Handling of Secure-World Exceptions.....	51
Appendix A: Instruction Listing	54
A.1. Capstone Instructions	54
A.2. Extended RV64IZicsr Memory Access Instructions	55
Appendix B: Comparison with Other Capability-Based ISA Extensions to RISC-V	58
B.1. Commonalities	58
B.2. Differences.....	59
Bibliography	60

1. Introduction

Capstone is a novel CPU instruction set architecture (ISA) that creates a single unified architectural abstraction for achieving multiple security goals, thus liberating software developers from the burden of working with the distinct fundamental primitives exposed by numerous security extensions that often do not interoperate easily.

1.1. Properties to Support

The ultimate goal of Capstone is to provide a unified architectural abstraction for multiple security goals. This goal requires Capstone to support the following properties.

Exclusive access

Software should be guaranteed exclusive access to certain memory regions if needed. This is in spite of the existence of software traditionally entitled to higher privileges such as the OS kernel and the hypervisor.

Revocable delegation

Software components should be able to delegate authority to other components in a revocable manner. For example, after an untrusted library function has been granted access to a memory region, the caller should be able to revoke this access.

Dynamically extensible hierarchy

The hierarchy of authority should be dynamically extensible, rather than predefined by the architecture such as hypervisor-kernel-user found in traditional platforms. This makes it possible to use the same set of abstractions for memory isolation and memory sharing regardless of where a software component lies in the hierarchy.

Safe context switching

A mechanism that protects the confidentiality and integrity of the execution context of software during control flow transfers across security domain boundaries, including asynchronous ones such as those for interrupt and exception handling, should be provided.

1.2. Major Design Elements

The Capstone architecture design is based on the idea of capabilities, which are unforgeable tokens that represent authority to perform memory accesses and control flow transfers, among other operations. Capstone extends the traditional capability model with new capability types including

the following.

Linear capabilities

Linear capabilities are guaranteed not to alias with other capabilities that both grant memory access and are in architecturally visible locations (i.e., their actual contents might affect the execution of the whole system). Operations on linear capabilities maintain this property. For example, instructions can only move, but not copy, linear capabilities between general-purpose registers. They can hence enable safe exclusive access to memory regions. Capabilities that do not have this property are called *non-linear* capabilities.

Revocation capabilities

Revocation capabilities cannot be used to perform memory accesses or control flow transfers. Instead, they convey the authority to revoke other capabilities. Each revocation capability is derived from a linear capability and can later be used to revoke (i.e., invalidate) capabilities derived from it. This mechanism enables revocable and arbitrarily extensible chains of delegation of authority.

Uninitialised capabilities

Uninitialised capabilities convey write-only authority to memory. They can be turned into linear capabilities after the memory region has been “initialised”, i.e., when the whole memory region has been overwritten with fresh data. Uninitialised capabilities enable safe initialisation of memory regions and prevent secret leakage without incurring extra performance overhead.

1.3. Capstone-RISC-V ISA Overview

While Capstone does not assume any specific modern ISA, we choose to propose a Capstone extension to RISC-V due to its open nature and the availability of toolchains and simulators.

The Capstone-RISC-V ISA is an RV64IZicsr extension that makes the following types of changes to the base architecture:

Registers

- Each general-purpose register is extended to 129 bits to accommodate 128-bit capabilities.
- New control and status registers (CSRs) are added.
- Capability control and status registers (*capability CSRs* or *CCSRs*) are added.
- New instructions for manipulating capabilities in general-purpose registers or CCSRs are

added.

Memory

- The physical memory is partitioned into two disjoint regions, i.e., the *normal memory* and the *secure memory*.
 - The normal memory is exclusively for accesses through capabilities.
 - The secure memory is exclusively for accesses through the virtual memory.
- Each memory location can either contains an integer or a capability, and the confusion between the two is not allowed.
- New instructions for accessing capabilities in the memory or accessing memory using capabilities are added.

World

- Software components are allowed to run in either of the two *worlds*, i.e., the *normal world* and the *secure world*.
 - The normal world follows the traditional privilege levels, allows both capability-based accesses and virtual memory accesses, and is therefore compatible with existing software.
 - The secure world follows the Capstone design, limits memory accesses to capability-based accesses and provides the security guarantees of Capstone.

Control flow instructions

- New instructions for control flow transfers using capabilities are added.
- New instructions for safe context switching in the secure world are added.
- New instructions for world switching are added.

Interrupts and exceptions

- New exception types are added.
- A new mechanism for handling interrupts and exceptions in the secure world is added.

Existing instructions

- Some existing instructions are adjusted, extended or disabled.

1.4. Assembly Mnemonics

Each Capstone-RISC-V instruction is given a mnemonic prefixed with **CS.**. In contexts where it is clear we are discussing Capstone-RISC-V instructions, we will omit the **CS.** prefix for brevity.

In assembly code, the list of operands to an instruction is supplied following the instruction mnemonic, with the operands separated by commas, in the order of **rd**, **rs1**, **rs2**, **imm** for any operand the instruction expects.

1.5. Notations

When specifying the semantics of instructions, we use the following notations to represent the type of each operand:

I

Integer register.

C

Capability register.

S

Sign-extended immediate.

Z

Zero-extended immediate.

1.6. Bibliography

The initial motivation, design, evaluation, and analysis of Capstone have been discussed in the following paper:

- [Capstone: A Capability-based Foundation for Trustless Secure Memory Access](#) by Jason Zhijingcheng Yu, Conrad Watt, Aditya Badole, Trevor E. Carlson, Prateek Saxena. In *Proceedings of the 32nd USENIX Security Symposium*. Anaheim, CA, USA. August 2023.

2. Programming Model

The Capstone-RISC-V ISA has extended part of the machine state, including both some registers and the memory, to enable the storage and handling of capabilities.

2.1. Capabilities

2.1.1. Width

The width of a capability is 128 bits. We represent this as $CLEN = 128$ and $CLENBYTES = 16$. Note that this does not affect the width of a raw address, which is $XLEN = 64$ bits, or equivalently, $XLENBYTES = 8$ bytes, same as in RV64IZicsr.

2.1.2. Fields

Each capability has the following architecturally-visible fields:

Table 1. Fields in a capability

Name	Range	Description
valid	$0..1$	Whether the capability is valid: 0 = invalid, 1 = valid
type	$0..6$	The type of the capability: 0 = linear, 1 = non-linear, 2 = revocation, 3 = uninitialised, 4 = sealed, 5 = sealed-return, 6 = exit
cursor	$0..2^{XLEN}-1$	Not applicable when $type = 4$ (sealed). The memory address the capability points to (to be used for the next memory access)
base	$0..2^{XLEN}-1$	The base memory address of the memory region associated with the capability
end	$0..2^{XLEN}-1$	Not applicable when $type = 4$ (sealed), $type = 5$ (sealed-return), or $type = 6$ (exit). The end memory address of the memory region associated with the capability

Name	Range	Description
perms	0..7	Not applicable when <code>type = 4</code> (sealed), <code>type = 5</code> (sealed-return), or <code>type = 6</code> (exit). One-hot encoded permissions associated with the capability: 0 = no access, 1 = execute-only, 2 = write-only, 3 = write-execute, 4 = read-only, 5 = read-execute, 6 = read-write, 7 = read-write-execute
async	0..2	Only applicable when <code>type = 4</code> (sealed) or <code>type = 5</code> (sealed-return). How the capability is sealed: 0 = synchronously, 1 = upon exception, 2 = upon interrupt
reg	0..31	Only applicable when <code>type = 5</code> (sealed-return). The index of the general-purpose register to restore the capability to

The range of the `perms` field has a partial order $\leq_p$ defined as follows:

```

<=p = {
  (0, 0), (0, 1), (0, 2), (0, 3), (0, 4), (0, 5), (0, 6), (0, 7),
  (1, 1), (1, 3), (1, 5), (1, 7),
  (2, 2), (2, 3), (2, 6), (2, 7),
  (3, 3), (3, 7),
  (4, 4), (4, 5), (4, 6), (4, 7),
  (5, 5), (5, 7),
  (6, 6), (6, 7),
  (7, 7)
}

```

We say a capability `c` *aliases* with a capability `d` if and only if the intersection between `[c.base, c.end)` and `[d.base, d.end)` is non-empty.

For two revocation capabilities `c` and `d` (i.e., `c.type = d.type = 2`), we say `c <_t d` if and only if

- `c` aliases with `d`
- The creation of `c` was earlier than the creation of `d`

In addition to the above fields, an implementation also needs to maintain sufficient metadata to test the $<_t$ relation. It will be clear that for any pair of aliasing revocation capabilities, the order of their creations is well-defined.

▼ **Note: the implementation of `valid` field**

The `valid` field is involved in `revocation`, where it might be changed due to a `revocation operation` on a different capability. A performant implementation, therefore, may prefer not to maintain the `valid` field inline with the other fields.

▼ **Note: addition/compression to capability fields**

Implementations are free to maintain additional fields to capabilities, or compress the representation of the above fields, as long as each capability fits in `CLEN` bits.

It is not required to be able to represent capabilities with all combinations of field values in a compressed representation, as long as the following conditions are satisfied:

1. For load and store instructions that move a capability between a register and memory, the value of the capability is preserved.
2. The resulting capability values of any operation are not more powerful than when the same operation is performed on a Capstone-RISC-V implementation without compression.
 - More specifically, if an execution trace is valid (i.e., without exceptions) on the compressed implementation, then it must also be valid on the uncompressed implementation. For example, a trivial yet useless compression would be to store nothing and always return a capability with `valid = 0`.

For different types of capabilities, a specific subset of the fields is used. The table below summarises the fields used for each type of capabilities.

Table 2. Fields used for each type of capabilities

Type	<code>type</code>	<code>valid</code>	<code>cursor</code>	<code>base</code>	<code>end</code>	<code>perms</code>	<code>async</code>	<code>reg</code>
Linear	0	Yes	Yes	Yes	Yes	Yes	-	-
Non-linear	1	Yes	Yes	Yes	Yes	Yes	-	-
Revocation	2	Yes	Yes	Yes	Yes	Yes	-	-
Uninitialized	3	Yes	Yes	Yes	Yes	Yes	-	-
Sealed	4	Yes	-	Yes	-	-	Yes	-
Sealed-return	5	Yes	Yes	Yes	-	-	Yes	Yes
Exit	6	Yes	Yes	Yes	-	-	-	-

When the `async` field of a sealed-return capability is 0 (synchronous), or when the `type` field of the capability is 6 (exit), some memory accesses are granted by this capability. The following table shows the memory accesses granted in such scenarios, where `size` is the size of the memory access

in bytes.

Table 3. Memory accesses granted by sealed-return and exit capabilities

Capability type	asyn	Read	Write	Execute
Sealed-return	0	cursor in [base + 3 * CLENBYTES, base + 33 * CLENBYTES - size]	cursor in [base + 3 * CLENBYTES, base + 33 * CLENBYTES - size]	No
Exit	-	cursor in [base + 3 * CLENBYTES, base + 33 * CLENBYTES - size]	cursor in [base + 3 * CLENBYTES, base + 33 * CLENBYTES - size]	No

In other scenarios and for other capability types without the `perms` field, no read/write/execute memory accesses are granted by the capability.

The following figure shows the overview of different types of capabilities in Capstone-RISC-V, and the operations that change the type of a capability.

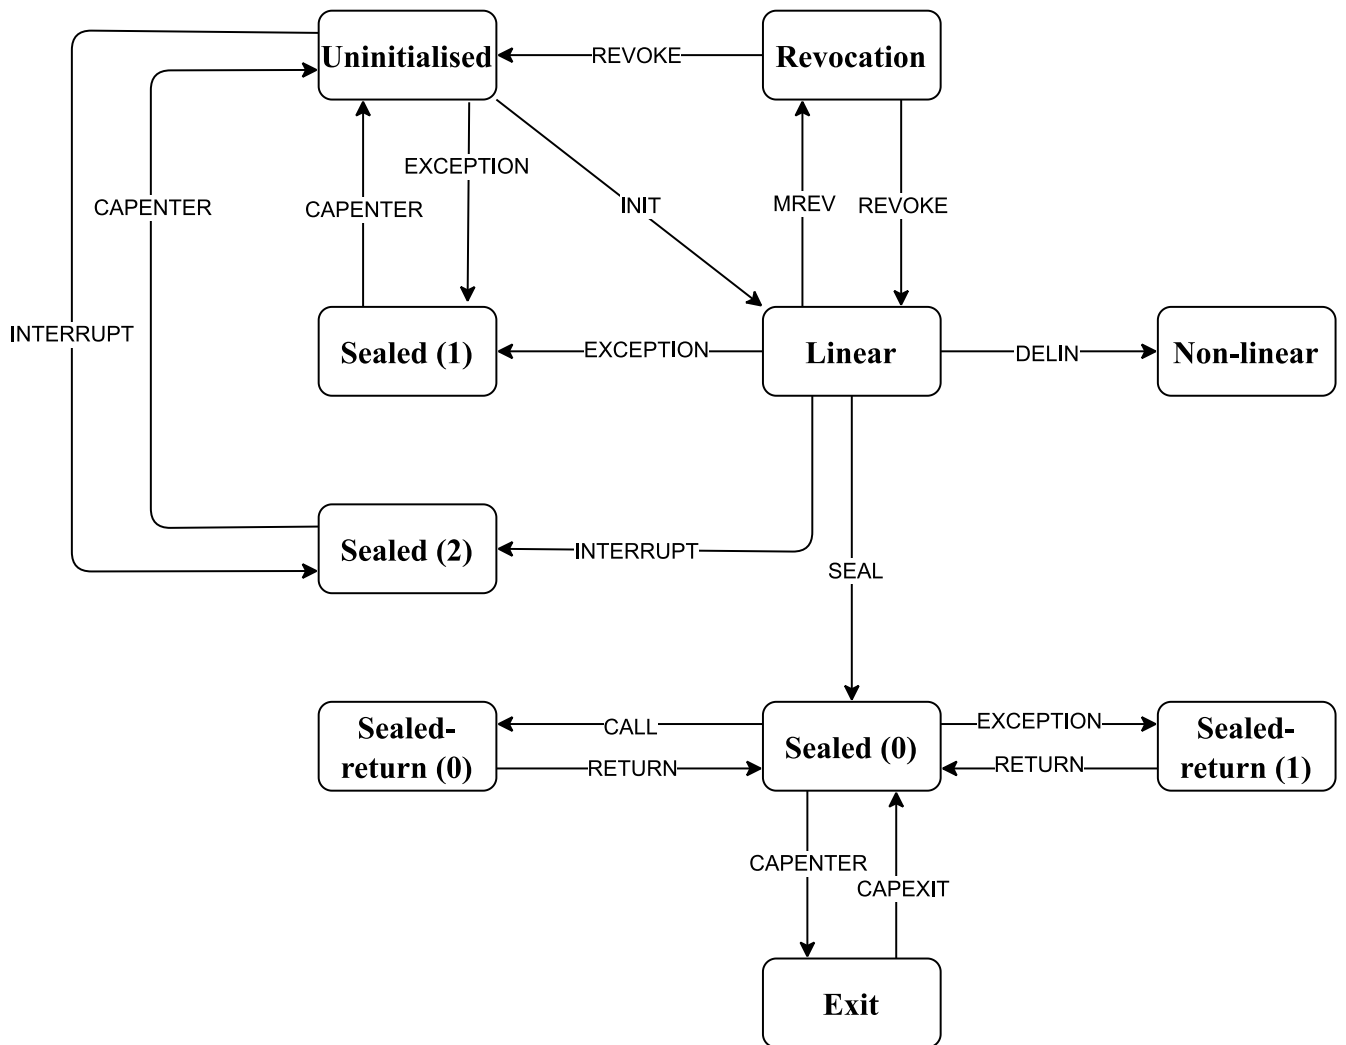


Figure 1. Overview of different types of capabilities in Capstone-RISC-V

2.2. Extension to General-Purpose Registers

The Capstone-RISC-V ISA extends each of the 32 general-purpose registers, so it contains either a capability or a raw `XLEN`-bit integer. The type of data contained in a register is maintained and

confusion of the type is not allowed, except for **x0/c0** as discussed below. In assembly code, the type of data expected in a register operand is indicated by the alias used for the register, as summarised in the following table.

Index	XLEN-bit integer	Capability
0	x0/zero	c0/cnull
1	x1/ra	c1/cra
2	x2/sp	c2/csp
3	x3/gp	c3/cgp
4	x4/tp	c4/ctp
5	x5/t0	c5/ct0
6	x6/t1	c6/ct1
7	x7/t2	c7/ct2
8	x8/s0/fp	c8/cs0/cfp
9	x9/s1	c9/cs1
10	x10/a0	c10/ca0
11	x11/a1	c11/ca1
12	x12/a2	c12/ca2
13	x13/a3	c13/ca3
14	x14/a4	c14/ca4
15	x15/a5	c15/ca5
16	x16/a6	c16/ca6
17	x17/a7	c17/ca7
18	x18/s2	c18/cs2
19	x19/s3	c19/cs3
20	x20/s4	c20/cs4
21	x21/s5	c21/cs5
22	x22/s6	c22/cs6
23	x23/s7	c23/cs7
24	x24/s8	c24/cs8
25	x25/s9	c25/cs9
26	x26/s10	c26/cs10
27	x27/s11	c27/cs11
28	x28/t3	c28/ct3
29	x29/t4	c29/ct4
30	x30/t5	c30/ct5

Index	XLEN-bit integer	Capability
31	x31/t6	c31/ct6

`x0/c0` is a read-only register that can be used both as an integer and as a capability, depending on the context. When used as an integer, it has the value `0`. When used as a capability, it has the value `{ valid = 0, type = 0, cursor = 0, base = 0, end = 0, perms = 0 }`. Any attempt to write to `x0/c0` will be silently ignored (no exceptions are raised).

In this document, for `i = 0, 1, ..., 31`, we use `x[i]` to refer to the general-purpose register with index `i`.

2.3. Extension to Other Registers

2.3.1. Program Counter

Similar to the general-purpose registers, the program counter (`pc`) is extended to contain a capability or an integer.

▼ **Note: what is `cwrl`**

`cwrl` is a special register added in Capstone-RISC-V that indicates the world currently in execution. Please see [Added Registers](#) for details.

During the instruction fetch stage, an exception is raised when any of the following conditions is met:

Normal world (i.e., `cwrl = 0`)

- `cwrl` is `0` (normal world) and any of the conditions for RV64IZicsr is met.
- **Instruction access fault (1)**
 - `pc` does not contain an integer.

Secure world (i.e., `cwrl = 1`)

- **Instruction access fault (1)**
 - `pc` does not contain a capability.
 - `pc.valid` is `0` (invalid).
 - `pc.type` is neither `0` (linear) nor `1` (non-linear).
 - `pc.perms` is not executable (i.e., `1 <= pc.perms` does not hold).
 - `pc.cursor` is not in the range `[pc.base, pc.end - 4]`.
- **Instruction address misaligned (0)**
 - `pc.cursor` is not aligned to 4.

If no exception is raised:

Secure world (i.e., `cwrlld = 1`):

1. The instruction pointed to by `pc.cursor` is fetched and executed.
2. Set `pc.cursor` to `pc.cursor + 4` at the end of the instruction.

Normal world (i.e., `cwrlld = 0`):

1. The instruction pointed to by `pc` is fetched and executed.
2. Set `pc` to `pc + 4` at the end of the instruction.

2.4. Added Registers

The Capstone-RISC-V ISA adds the following registers.

Table 4. Additional Registers in Capstone-RISC-V ISA

Mnemonic	CCSR encoding	CSR encoding	Description
<code>ceh</code>	<code>0x000</code>	-	The sealed capability or PC entry for the exception handler
<code>cinit</code>	<code>0x002</code>	-	The initial capability covering the entire address space of the secure memory
<code>epc</code>	<code>0x003</code>	-	The exception program counter register
<code>cwrlld</code>	-	-	The world currently in execution. <code>0</code> = normal world, <code>1</code> = secure world
<code>normal_pc</code>	-	-	The program counter for the normal world before the secure world is entered
<code>normal_sp</code>	-	-	The stack pointer for the normal world before the secure world is entered
<code>switch_reg</code>	-	-	The index of the general-purpose register used when switching worlds
<code>switch_cap</code>	<code>0x004</code>	-	The capability used to store contexts when switching worlds asynchronously
<code>exit_reg</code>	-	-	The index of the general-purpose register for receiving the exit code when exiting the secure world
<code>tval</code>	-	<code>0x801</code>	The exception data (trap value) register
<code>cause</code>	-	<code>0x802</code>	The exception cause register
<code>emode</code>	-	<code>0x804</code>	The encoding mode of the machine. <code>0</code> = integer encoding mode, <code>1</code> = capability encoding mode

Some of the registers only allow capability values and have special semantics related to the system-wide machine state. They are referred to as *capability control and status registers* (CCSRs). Under their respective constraints, CCSRs can be manipulated using *control and status instructions*.

The manipulation constraints for each CCSR are indicated below.

Table 5. Manipulation Constraints for CCSRs

Mnemonic	Read	Write
<code>ceh</code>	Secure world	Secure world
<code>cinit</code>	Normal world; one-time only	Not allowed
<code>epc</code>	Secure world	Secure world
<code>switch_cap</code>	Normal world	Normal world

Some of the registers are added as *control and status registers* (CSRs). These registers are manipulated by the same instructions that manipulate CSRs as in RV64IZicsr. When the manipulation constraints of these additional CSRs are not satisfied, the behaviour of these instructions follows the RV64IZicsr convention for other CSRs.

The manipulation constraints for each additional CSR are indicated below.

Table 6. Manipulation Constraints for Additional CSRs

Mnemonic	Read	Write
<code>tval</code>	Secure world	Secure world
<code>cause</code>	Secure world	Secure world
<code>emode</code>	Normal world	Normal world

▼ Note: `ceh`

`ceh` is about the functionality of a domain only. A domain should be allowed to set `ceh` for itself. That also means it needs to be switched when switching domains.

▼ Note: `cinit`

`cinit` is a CCSR that is used to bootstrap capabilities after a *system reset*. *control and status instructions* can be used to read the initial capability in `cinit` and write it to a general-purpose register. This operation can only be performed once after each reset. Any attempt to write `cinit` will be silently ignored, and any attempt to read it after the first time will return the content of `cnull`.

2.5. Extension to Memory

The memory is addressed using an `XLEN`-bit integer at byte-level granularity. In addition to raw integers, each `CLEN`-bit aligned address can also store a capability. The type of data contained in a memory location is maintained and confusion of the type is not allowed.

▼ **Note: maintaining the type of data**

For a store operation that accesses the memory location $[addr, addr + size)$, the type of data contained in the memory location is maintained as follows:

- If a capability is stored to the memory location $[addr, addr + CLENBYTES)$, the type of data contained in the memory location will become a capability, where $addr$ is $CLENBYTES$ -byte aligned.
- If an integer is stored to the memory location $[addr, addr + size)$, it will make the $CLEN$ -bit aligned memory location $[cbase, cend)$ an integer, where $cbase = addr \& \sim(CLENBYTES - 1)$ and $cend = cbase + CLENBYTES$.

Note

In this document, when we say the memory location $[addr, addr + CLENBYTES]$, we mean that the following content will be loaded from or stored to the memory location:

- Depending on the type of data contained in the memory location, the content being loaded from the memory location is either a capability at the memory location $[addr, addr + CLENBYTES]$, or an integer at the memory location $[addr, addr + XLENBYTES]$.
- Depending on the type of data being stored to the memory location, the data is either stored as a capability at the memory location $[addr, addr + CLENBYTES]$, or an integer at the memory location $[addr, addr + XLENBYTES]$.

The physical memory is divided into two disjoint regions: the *normal memory* and the *secure memory*. While the normal memory is only accessible through *Memory Management Unit* (MMU), the secure memory can only be accessed through capabilities.

Hence, we have the following constraints on the memory accesses in different worlds.

Table 7. Memory Accesses in the normal world and secure world

World	Memory Management Unit (MMU)	Capabilities
Normal world	Yes	Yes
Secure world	No	Yes

The bounds of the secure memory $[SBASE, SEND)$ are implementation-defined. But both $SBASE$ and $SEND$ are required to be $CLENBYTES$ -byte aligned.

Memory Region	Address Space	Access Method
Normal memory	$[0, SBASE) \cup [SEND, 2^{XLEN})$	MMU
Secure memory	$[SBASE, SEND)$	Capabilities

▼ **Note: undefined behaviour**

The following load results are *undefined*:

- Load an integer from a memory location when the last capability store to its **CLENBYTES**-byte aligned memory location is more recent than the last integer store to the memory location itself.

2.6. Instruction Set

The Capstone-RISC-V instruction set is based on the RV64IZicsr instruction set. The (uncompressed) instructions are fixed 32-bit wide, and laid out in memory in little-endian order. In the encoding space of the RV64IZicsr instruction set, Capstone-RISC-V instructions occupies the “custom-2” subset, i.e., the opcode of all Capstone-RISC-V instructions is **0b1011011**.

Capstone-RISC-V instruction encodings follow three basic formats: R-type, I-type and S-type, as described below (more details are also provided in the [RISC-V ISA Manual](#)).




Figure 2. R-type instruction format




Figure 3. I-type instruction format




Figure 4. S-type instruction format

R-type instructions receive up to three register operands, and I-type/S-type instructions receive up to two register operands and a 12-bit-wide immediate operand.

Capstone-RISC-V also uses a register operand of R-type as an immediate operand in some instructions, which is called *register-immediate* (RI) type for convenience in this document.




Figure 5. RI-type instruction format

The so-called RI-type instructions are actually *derivatives* of R-type instructions. They receive up to two register operands and a 5-bit-wide immediate operand.

2.7. System Reset

Upon reset, the system state must conform to the following specifications.

- Each general-purpose register either contains an integer, or a capability with `valid = 0` (invalid).
- No addressable memory location can contain a capability.
- `ceh`, `epc` and `switch_cap` contain either an integer or a capability with `valid = 0` (invalid).
- `cwrlld = 0` (normal world).
- `emode = 0` (integer encoding mode).
- `cinit = { valid = 1, type = 0, cursor = SBASE, base = SBASE, end = SEND, perms = 7 }.`
- Specifications for RV64IZicsr.

3. Capability Manipulation Instructions

Capstone-RISC-V provides instructions for creating, modifying, and destroying capabilities. Note that due to the guarantee of provenance of capabilities, those instructions are the *only* way to manipulate capabilities. In particular, it is not possible to manipulate capabilities by manipulating the content of a memory location or register using other instructions.

3.1. Cursor, Bounds, and Permissions Manipulation

3.1.1. Capability Movement

Capabilities can be moved between registers with the MOVC instruction.

[Sail definition](#)




Figure 6. MOVC instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability

If no exception is raised:

- If $rs1 = rd$, the instruction is a no-op.
- Otherwise
 1. Write $x[rs1]$ to $x[rd]$
 2. If $x[rs1]$ is not a non-linear capability (i.e., $type \neq 1$), write `cnul` to $x[rs1]$.

3.1.2. Cursor Increment

The CINCOFFSET and CINCOFFSETIMM instructions increment the `cursor` of a capability by a given amount (offset).

CINCOFFSET

[Sail definition](#)




Figure 7. CINCOFFSET instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
 - $x[rs2]$ is not an integer.
- Unexpected capability type (26)
 - $x[rs1]$ has $type = 3$ (uninitialised) or $type = 4$ (sealed).

If no exception is raised:

1. Set val to $x[rs2]$.
2. `MOVC rd, rs1.`
3. Set $x[rd].cursor$ to $x[rd].cursor + val$.

CINCOFFSETIMM

Sail definition




Figure 8. CINCOFFSETIMM instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
- Unexpected capability type (26)
 - $x[rs1]$ has $type = 3$ (uninitialised) or $type = 4$ (sealed).

If no exception is raised:

1. `MOVC rd, rs1.`
2. Set $x[rd].cursor$ to $x[rd].cursor + imm$.

3.1.3. Cursor Setter

The `cursor` field of a capability can also be directly set with the SCC instruction.

Sail definition




Figure 9. SCC instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
 - $x[rs2]$ is not an integer.
- Unexpected capability type (26)
 - $x[rs1]$ has `type = 3` (uninitialised) or `type = 4` (sealed).

If no exception is raised:

1. Set `val` to $x[rs2]$.
2. `MOVC rd, rs1`.
3. Set $x[rd].cursor$ to `val`.

3.1.4. Field Query

The LCC instruction is used to read a field from a capability.

[Sail definition](#)




Figure 10. LCC instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
- Unexpected capability type (26)
 - `imm = 2` and $x[rs1]$ has `type = 4` (sealed).
 - `imm = 4` and $x[rs1]$ has `type = 4` (sealed), `type = 5` (sealed-return), or `type = 6` (exit).
 - `imm = 5` and $x[rs1]$ has `type = 4` (sealed), `type = 5` (sealed-return), or `type = 6` (exit).
 - `imm = 6` and $x[rs1]$ does not have `type = 4` (sealed) or `type = 5` (sealed-return).
 - `imm = 7` and $x[rs1]$ does not have `type = 5` (sealed-return).

If no exception is raised:

- If `imm > 7`, write `zero` to `x[rd]`
- Otherwise, write `field` to `x[rd]` according to the [LCC multiplexing table](#).

Table 8. LCC multiplexing table

imm	field
0	<code>x[rs1].valid</code>
1	<code>x[rs1].type</code>
2	<code>x[rs1].cursor</code>
3	<code>x[rs1].base</code>
4	<code>x[rs1].end</code>
5	<code>x[rs1].perms</code>
6	<code>x[rs1].async</code>
7	<code>x[rs1].reg</code>

3.1.5. Bounds Shrinking

The bounds (`base` and `end` fields) of a capability can be shrunk with the SHRINK instruction.

[Sail definition](#)




Figure 11. SHRINK instruction format

An exception is raised when any of the following conditions is met:

- **Unexpected operand type (24)**
 - `x[rd]` is not a capability.
 - `x[rs1]` is not an integer.
 - `x[rs2]` is not an integer.
- **Unexpected capability type (26)**
 - `x[rd].type` is not 0, 1, or 3 (linear, non-linear, or uninitialised).
- **Illegal operand value (29)**
 - `x[rs1] >= x[rs2]`.
 - `x[rs1] < x[rd].base` or `x[rs2] > x[rd].end`.

If no exception is raised:

1. Set `x[rd].base` to `x[rs1]` and `x[rd].end` to `x[rs2]`.

2. If `x[rd].cursor < x[rs1]`, set `x[rd].cursor` to `x[rs1]`.
3. If `x[rd].cursor > x[rs2]`, set `x[rd].cursor` to `x[rs2]`.

3.1.6. Bounds Splitting

The SPLIT instruction can split a capability into two by splitting the bounds. It attempts to split the capability `x[rs1]` into two capabilities, one with bounds `[x[rs1].base, x[rs2])` and the other with bounds `[x[rs2], x[rs1].end)`.

Sail definition




Figure 12. SPLIT instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
 - `x[rs2]` is not an integer.
- Invalid capability (25)
 - `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not 0 (linear), 1 (non-linear) or 3 (uninitialised).
- Illegal operand value (29)
 - `x[rs2] <= x[rs1].base` or `x[rs2] >= x[rs1].end`.

If no exception is raised:

1. If `rs1 = rd`, the instruction is a no-op.
2. Set `val` to `x[rs2]`.
3. Write `x[rs1]` to `x[rd]`.
4. Set `x[rs1].end` to `val`, and `x[rd].base` to `val`.
5. If `x[rs1].cursor < val`, set `x[rd].cursor` to `val`.
6. If `x[rs1].cursor >= val`, set `x[rs1].cursor` to `val`.

3.1.7. Permission Tightening

The TIGHTEN instruction tightens the permissions (`perms` field) of a capability.

Sail definition




Figure 13. TIGHTEN instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
- Unexpected capability type (26)
 - $x[rs1].type$ is not 0, 1, or 3 (linear, non-linear, or uninitialised).
- Illegal operand value (29)
 - $imm \leq 7$, and $imm \leq p\ x[rs1].perms$ does not hold.

If no exception is raised:

1. `MOVC rd, rs1.`
2. If $imm > 7$, set $x[rs1].perms$ to 0. Otherwise, set $x[rs1].perms$ to imm .

3.2. Type Manipulation

Some instructions can affect the `type` field of a capability directly. In general, the `type` field cannot be set arbitrarily. Instead, it is changed as the side effect of certain semantically significant operations.

3.2.1. Delinearisation

The DELIN instruction delinearises a linear capability.

Sail definition




Figure 14. DELIN instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rd]$ is not a capability.
- Unexpected capability type (26)

- `x[rd].type` is not 0 (linear).

If no exception is raised:

- Set `x[rd].type` to 1 (non-linear).

3.2.2. Initialisation

The INIT instruction transforms an uninitialised capability into a linear capability after its associated memory region has been fully initialised (written with new data).

[Sail definition](#)




Figure 15. INIT instruction format

An exception is raised when any of the following conditions is met:

- **Unexpected operand type (24)**
 - `x[rs1]` is not a capability.
 - `x[rs2]` is not an integer.
- **Unexpected capability type (26)**
 - `x[rs1].type` is not 3 (uninitialised).
- **Illegal operand value (29)**
 - `x[rs1].cursor` and `x[rs1].end` are not equal.

If no exception is raised:

1. Set `val` to `x[rs2]`.
2. `MOVC rd, rs1`.
3. Set `x[rd].type` to 0 (linear), and `x[rd].cursor` to `x[rd].base + val`.

3.2.3. Sealing

The SEAL instruction seals a linear capability.

[Sail definition](#)




Figure 16. SEAL instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.
- Unexpected capability type (26)
 - $x[rs1].type$ is not 0 (linear).
- Insufficient capability permissions (27)
 - $6 \leq p \ x[rs1].perms$ does not hold.
- Illegal operand value (29)
 - The size of the memory region associated with $x[rs1]$ is smaller than $CLENBYTES * 33$ bytes (i.e., $x[rs1].end - x[rs1].base < CLENBYTES * 33$).
 - $x[rs1].base$ is not aligned to $CLENBYTES$ bytes.
 - The content of the memory region $[x[rs1].base + CLENBYTES, x[rs1].base + 2 * CLENBYTES)$ does not contain a capability.

If no exception is raised:

1. `MOVC rd, rs1.`
2. Set $x[rd].type$ to 2 (sealed), and $x[rd].async$ to 0 (synchronous).

3.3. Dropping

The DROP instruction invalidates a capability.

[Sail definition](#)




Figure 17. DROP instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - $x[rs1]$ is not a capability.

If no exception is raised:

1. If `x[rs1].valid` is 0 (invalid), the instruction is a no-op.
2. Otherwise, set `x[rs1].valid` to 0 (invalid).

3.4. Revocation

3.4.1. Revocation Capability Creation

The MREV instruction creates a revocation capability.

[Sail definition](#)




Figure 18. MREV instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not 0 (linear).

If no exception is raised:

1. Write `x[rs1]` to `x[rd]`.
2. Set `x[rd].type` to 2 (revocation).

3.4.2. Revocation Operation

The REVOKE instruction revokes a capability.

[Sail definition](#)




Figure 19. REVOKE instruction format

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not 2 (revocation).

If no exception is raised:

1. For each capability `c` in the system (in either a register or memory location), `c.valid` is set to 0 (invalid) if any of the following conditions are met:
 - `c.type` is not 2 (revocation), `c.valid` is 1 (valid), and `c` aliases with `x[rs1]`.
 - `c.type` is 2 (revocation), `c.valid` is 1 (valid), and `x[rs1] < t c`.
2. `x[rs1].type` is set to 0 (linear) if at least one of the following conditions are met:
 - For every invalidated capability `c`, the type of `c` is non-linear (i.e., `c.type` is 1).
 - `2 <= p x[rs1].perms` does not hold.
3. Otherwise, set `x[rs1].type` to 3 (uninitialised), and `x[rs1].cursor` to `x[rs1].base`.

4. Memory Access Instructions

Capstone-RISC-V provides instructions to load and store capabilities from/to memory regions.

4.1. Load Capabilities

[Sail definition](#)

The LDC instruction loads a capability from the memory.

4.1.1. Secure world or normal world capability encoding mode

The LDC instruction loads a capability from the memory using a capability, when `cwrld` is `1` (secure world), or when `cwrld` is `0` (normal world) but `emode` is `1` (capability encoding mode).




Figure 20. LDC instruction format in secure world or normal world capability encoding mode

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is `0` (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not `0` (linear), `1` (non-linear), `5` (sealed-return), or `6` (exit).
 - `x[rs1].type` is `5` (sealed-return) and `x[rs1].async` is not `0` (synchronous).
- Insufficient capability permissions (27)
 - `x[rs1].type` is `0` (linear) or `1` (non-linear) and `4 <= p x[rs1].perms` does not hold.
- Capability out of bound (28)
 - `x[rs1].type` is `0` (linear) or `1` (non-linear), and `x[rs1].cursor + imm` is not in the range `[x[rs1].base, x[rs1].end - CLENBYTES]`.
 - `x[rs1].type` is `5` (sealed-return) or `6` (exit), and `x[rs1].cursor + imm` is not in the range `[x[rs1].base + 3 * CLENBYTES, x[rs1].base + 33 * CLENBYTES - CLENBYTES]`.
- Load address misaligned (4)
 - `x[rs1].cursor + imm` is not aligned to `CLENBYTES` bytes.
- Load access fault (5)
 - The data contained in the memory location `[x[rs1].cursor + imm, x[rs1].cursor + imm + CLENBYTES)` is not a capability.
- Insufficient capability permissions (27)

- The capability being loaded is not a non-linear capability (i.e., `type != 1`), `x[rs1].type` is `0` (linear) or `1` (non-linear), and `2 <= x[rs1].perms` does not hold.

If no exception is raised:

1. Set `cap` to `x[rs1]`.
2. Load the capability at the memory location `cap.cursor + imm`, `cap.cursor + imm + CLENBYTES`) into `x[rd]`.
3. If `x[rd].type` is not `1` (non-linear), write `cnull` to the memory location `[cap.cursor + imm, cap.cursor + imm + CLENBYTES)`.

4.1.2. Normal world integer encoding mode

When `cwrlld` is `0` (normal world) and `emode` is `0` (integer encoding mode), the LDC instruction loads a capability from the normal memory using raw addresses. The raw addresses are interpreted as physical addresses or virtual addresses depending on the whether virtual memory is enabled.




Figure 21. LDC instruction format in normal world integer encoding mode

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not an integer.
- Load address misaligned (4)
 - `x[rs1] + imm` is not aligned to `CLENBYTES` bytes.
- Load access fault (5)
 - `x[rs1] + imm` is in the range `[SBASE, SEND)`.
 - The data contained in the memory location `[x[rs1] + imm, x[rs1] + imm + CLENBYTES)` is not a capability.

If no exception is raised:

1. Set `int` to `x[rs1]`.
2. Load the capability at the memory location `[int + imm, int + imm + CLENBYTES)` into `x[rd]`.
3. If `x[rd].type` is not `1` (non-linear), write `cnull` to the memory location `[int + imm, int + imm + CLENBYTES)`.

4.2. Store Capabilities

Sail definition

The STC instruction stores a capability to the memory.

4.2.1. Secure world or normal world capability encoding mode

The STC instruction stores a capability to the memory using a capability, when `cwrl` is `1` (secure world), or when `cwrl` is `0` (normal world) but `emode` is `1` (capability encoding mode).




Figure 22. STC instruction format in secure world or normal world capability encoding mode

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
 - `x[rs2]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is `0` (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not `0` (linear), `1` (non-linear), `3` (uninitialised), `5` (sealed-return), or `6` (exit).
 - `x[rs1].type` is `5` (sealed-return) and `x[rs1].async` is not `0` (synchronous).
- Insufficient capability permissions (27)
 - `x[rs1].type` is `0` or `1`, and `2 <= p x[rs1].perms` does not hold.
- Illegal operand value (29)
 - `x[rs1].type` is `3` (uninitialised) and `imm` is not `0`.
- Capability out of bound (28)
 - `x[rs1].type` is `0`, `1`, or `3`, and `x[rs1].cursor + imm` is not in the range `[x[rs1].base, x[rs1].end - CLENBYTES]`.
 - `x[rs1].type` is `5` or `6`, and `x[rs1].cursor + imm` is not in the range `[x[rs1].base + 3 * CLENBYTES, x[rs1].base + 33 * CLENBYTES - CLENBYTES]`.
- Store/AMO address misaligned (6)
 - `x[rs1].cursor + imm` is not aligned to `CLENBYTES` bytes.

If no exception is raised:

1. Store `x[rs2]` to the memory location `[x[rs1].cursor + imm, x[rs1].cursor + imm + CLENBYTES)`.
2. If `x[rs1].type` is 3 (uninitialised), set `x[rs1].cursor` to `x[rs1].cursor + CLENBYTES`.
3. If `x[rs2].type` is not 1 (non-linear), write `cnull` to `x[rs2]`.

4.2.2. Normal world integer encoding mode

When `cwrld` is 0 (normal world) and `emode` is 0 (integer encoding mode), the STC instruction stores a capability to the normal memory using raw addresses. The raw addresses are interpreted as physical addresses or virtual addresses depending on the whether virtual memory is enabled.




Figure 23. STC instruction format in normal world integer encoding mode

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not an integer.
 - `x[rs2]` is not a capability.
- Store/AMO address misaligned (6)
 - `x[rs1] + imm` is not aligned to `CLENBYTES` bytes.
- Store/AMO access fault (7)
 - `x[rs1] + imm` is in the range `[SBASE, SEND)`.

If no exception is raised:

1. Store `x[rs2]` to the memory location `[x[rs1] + imm, x[rs1] + imm + CLENBYTES)`.
2. If `x[rs2].type` is not 1 (non-linear), write `cnull` to `x[rs2]`.

5. Control Flow Instructions

5.1. Jump to Capabilities

The CJALR and CBNZ instructions allow jumping to a capability, i.e., setting the program counter to a given capability, in a unconditional or conditional manner.

5.1.1. CJALR

[Sail definition](#)




Figure 24. CJALR instruction format

An exception is raised when any of the following conditions is met:

- **Illegal instruction (2)**
 - `cwrlid` is 0 (normal world).
- **Unexpected operand type (24)**
 - `x[rs1]` is not a capability.

If no exception is raised:

1. Set `cap` to `x[rs1]`.
2. Set `pc.cursor` to `pc.cursor + 4`, write `pc` to `x[rd]`.
3. Set `cap.cursor` to `cap.cursor + imm`, write `cap` to `pc`.
4. If `rs1 != rd` and `x[rs1].type != 1`, write `cnull` to `x[rs1]`.

5.1.2. CBNZ

[Sail definition](#)




Figure 25. CBNZ instruction format

An exception is raised when any of the following conditions is met:

- **Illegal instruction (2)**
 - `cwrlid` is 0 (normal world).

- Unexpected operand type (24)
 - `x[rd]` is not a capability.
 - `x[rs1]` is not an integer.

If no exception is raised:

- If `x[rs1]` is 0, the instruction is a no-op.
- Otherwise
 1. Write `x[rd]` to `pc`.
 2. Set `pc.cursor` to `pc.cursor + imm`.
 3. If `x[rd].type != 1`, write `cnull` to `x[rd]`.

5.2. Domain Crossing

Domains in Capstone-RISC-V are individual software compartments that are protected by a safe context switching mechanism, i.e., *domain crossing*. The mechanism is provided by the CALL and RETURN instructions.

5.2.1. CALL

Sail definition

The CALL instruction is used to call a sealed capability, i.e., to switch to another *domain*.




Figure 26. CALL instruction format

An exception is raised when any of the following conditions is met:

- Illegal instruction (2)
 - `cwrlid` is 0 (normal world).
- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not 4 (sealed).
 - `x[rs1].async` is not 0 (synchronous).

If no exception is raised:

1. `MOVC cra, rs1`.
2. Swap the program counter (`pc`) with the content at the memory location `[cra.base, cra.base + CLENBYTES)`.
3. Swap `ceh` with the content at the memory location `[cra.base + CLENBYTES, cra.base + 2 * CLENBYTES)`.
4. Swap `csp` with the content at the memory location `[cra.base + 2 * CLENBYTES, cra.base + 3 * CLENBYTES)`.
5. Set `cra.type` to 5 (sealed-return), `cra.cursor` to `cra.base`, `cra.reg` to `rd`, and `cra.async` to 0 (synchronous).

5.2.2. RETURN

Sail definition




Figure 27. RETURN instruction format

An exception is raised when any of the following conditions is met:

- Illegal instruction (2)
 - `cwrld` is 0 (normal world).
- Unexpected operand type (24)
 - `rs1 != 0` and `x[rs1]` is not a capability.
 - `x[rs2]` is not an integer.
- Invalid capability (25)
 - `rs1 != 0` and `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `rs1 != 0` and `x[rs1].type` is not 5 (sealed-return).
 - `rs1 != 0` and `x[rs1].async` is neither 0 (synchronous) nor 1 (upon exception).

If no exception is raised:

If `rs1 = 0`:

1. Set `pc.cursor` to `x[rs2]`.
2. Write `pc` to `ceh`, and `epc` to `pc`.

3. If `epc.type != 1`, write `cnull` to `epc`.

Otherwise:

When `x[rs1].async = 0` (synchronous):

1. Write `x[rs1]` to `cap` and `cnull` to `x[rs1]`.
2. Set `pc.cursor` to `x[rs2]`, and swap the program counter (`pc`) with the content at the memory location `[cap.base, cap.base + CLENBYTES)`.
3. Swap `ceh` with the content at the memory location `[cap.base + CLENBYTES, cap.base + 2 * CLENBYTES)`.
4. Swap `csp` with the content at the memory location `[cap.base + 2 * CLENBYTES, cap.base + 3 * CLENBYTES)`.
5. Write `cap` to `x[cap.reg]` and set `x[cap.reg].type` to 4 (sealed).

When `x[rs1].async = 1` (upon exception):

1. Set `pc.cursor` to `x[rs2]`, and swap the program counter (`pc`) with the content at the memory location `[x[rs1].base, x[rs1].base + CLENBYTES)`.
2. Store `ceh` to the memory location `[x[rs1].base + CLENBYTES, x[rs1].base + 2 * CLENBYTES)`.
3. Set `x[rs1].type` to 4 (sealed), `x[rs1].async` to 0 (synchronous).
4. Write the resulting `x[rs1]` to `ceh`, and `cnull` to `x[rs1]`.
5. For `i = 1, 2, ..., 31`, swap `x[i]` with the content at the memory location `[ceh.base + (i + 1) * CLENBYTES, ceh.base + (i + 2) * CLENBYTES)`.

5.3. World Switching

The world switching mechanism of Capstone-RISC-V is provided by the CAPENTER and CAPEXIT instructions.

Normal World

Secure World

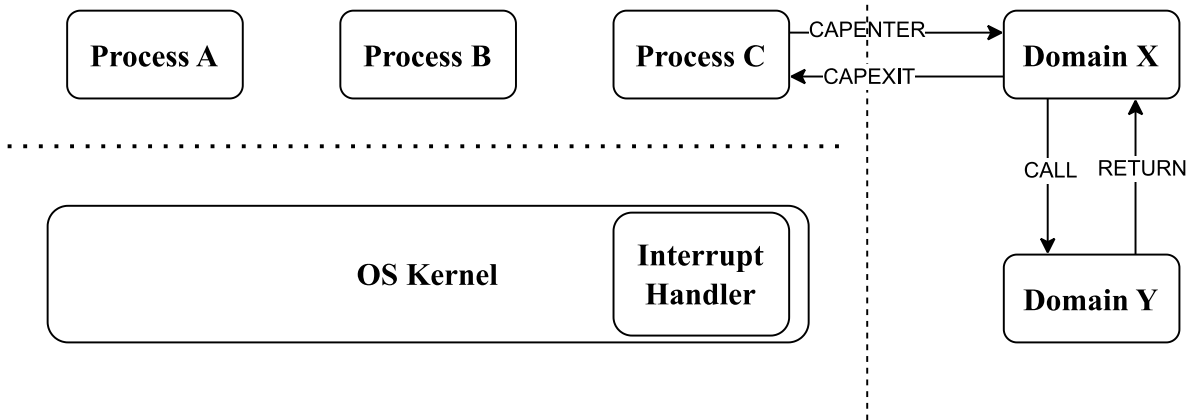


Figure 28. Overview of world switching in Capstone-RISC-V

5.3.1. CAPEXTER

Sail definition

The CAPEXTER instruction causes an entry into the secure world from the normal world. And it is only available in the normal world.




Figure 29. CAPEXTER instruction format

An exception is raised when any of the following conditions is met:

- **Illegal instruction (0)**
 - `cwld` is 1 (secure world).
- **Unexpected operand type (24)**
 - `x[rs1]` is not a capability.
- **Invalid capability (25)**
 - `x[rs1].valid` is 0 (invalid).
- **Unexpected capability type (26)**
 - `x[rs1].type` is not 4 (sealed).

If no exception is raised:

When `x[rs1].async = 0` (synchronous):

1. `MOVC cra, rs1.`

2. Write `pc` and `sp` to `normal_pc` and `normal_sp` respectively.
3. Load the program counter (`pc`) from the memory location `[cra.base, cra.base + CLENBYTES)`.
4. Load `ceh` from the memory location `[cra.base + CLENBYTES, cra.base + 2 * CLENBYTES)`.
5. Load `csp` from the memory location `[cra.base + 2 * CLENBYTES, cra.base + 3 * CLENBYTES)`.
6. Set `cra.type` to 6 (exit), `cra.cursor` to `cra.base`.
7. Write `rs1` to `switch_reg`, `rd` to `exit_reg`.
8. Set `cwrlld` to 1 (secure world).

When `x[rs1].async` is 1 (upon exception) or 2 (upon interrupt):

1. Write `x[rs1]` to `switch_cap`, and `cnull` to `x[rs1]`.
2. Write `pc` and `sp` to `normal_pc` and `normal_sp` respectively.
3. Load the program counter (`pc`) from the memory location `[switch_cap.base, switch_cap.base + CLENBYTES)`.
4. Load `ceh` from the memory location `[switch_cap.base + CLENBYTES, switch_cap.base + 2 * CLENBYTES)`.
5. For $i = 1, 2, \dots, 31$, load `x[i]` from the memory location `[switch_cap.base + (i + 1) * CLENBYTES, switch_cap.base + (i + 2) * CLENBYTES)`.
6. Set `switch_cap.type` to 3 (uninitialised), `switch_cap.cursor` to `switch_cap.base`.
7. Write `rs1` to `switch_reg`, `rd` to `exit_reg`.
8. Set `cwrlld` to 1 (secure world).

▼ **Note: the purpose of the `rd` operand**

The `rd` register will be set to a value indicating the cause of exit when the CPU core exits from the secure world synchronously or asynchronously.

5.3.2. CAPEXIT

Sail definition

The CAPEXIT instruction causes an exit from the secure world into the normal world. It is only available in the secure world and can only be used with an exit capability.




Figure 30. CAPEXIT instruction format

An exception is raised when any of the following conditions is met:

- **Illegal instruction (2)**
 - `cwrlid` is 0 (normal world).
- **Unexpected operand type (24)**
 - `x[rs1]` is not a capability.
 - `x[rs2]` is not an integer.
- **Invalid capability (25)**
 - `x[rs1].valid` is 0 (invalid).
- **Unexpected capability type (26)**
 - `x[rs1].type` is not 6 (exit).

If no exception is raised:

1. Write `x[rs1]` to `cap`, and `cnull` to `x[rs1]`.
2. Set `pc.cursor` to `x[rs2]`, and write `pc`, `ceh`, and `csp` to the memory location `[cap.base, cap.base + CLENBYTES)`, `[cap.base + CLENBYTES, cap.base + 2 * CLENBYTES)`, and `[cap.base + 2 * CLENBYTES, cap.base + 3 * CLENBYTES)` respectively.
3. Write `normal_pc + 4` and `normal_sp` to `pc` and `sp` respectively.
4. Set `cap.type` to 4 (sealed), `cap.async` to 0 (synchronous), and write the resulting `cap` to `x[switch_reg]`.
5. Set `x[exit_reg]` to 0 (normal exit).
6. Set `cwrlid` to 0 (normal world).

6. Control and Status Instructions

The CCSRRW instruction is used to read and write specified *capability control and status registers* (CCSRs).

Sail definition




Figure 31. CCSRRW instruction format

An exception is raised when any of the following conditions is met:

- **Unexpected operand type (24)**
 - `x[rs1]` is not a capability.
- **Illegal operand value (29)**
 - `imm` does not correspond to the encoding of a valid CCSR.

If no exception is raised:

1. If the **read constraint** is satisfied
 - The content of the CCSR specified by `imm` is written to `x[rd]`.
 - If `x[rd].type` is not **1** (non-linear), write `null` to the CCSR specified by `imm`.
2. Otherwise, write `null` to `x[rd]`.
3. If the **write constraint** is satisfied
 - Write `x[rs1]` to the CCSR specified by `imm`.
 - If `x[rs1].type` is not **1** (non-linear), write `null` to `x[rs1]`.
4. Otherwise, preserve the current content of the CCSR specified by `imm`.

7. Adjustments to Existing Instructions

For most of the existing instructions in RV64IZicsr, their behaviour is unmodified. The **cursor** field (if **type** $\neq 4$) or **base** field (if **type** $= 4$) of the capability is used if a register containing a capability is used as an operand.

The following instructions in RV64IZicsr are adjusted in Capstone-RISC-V:

- For memory access instructions, they are extended to use capabilities as addresses for memory access.
- For control flow instructions, they are slightly adjusted for the case where the program counter is a capability.
- Some instructions in RV64IZicsr become illegal instructions in the secure world.

7.1. Memory Access Instructions

In RV64IZicsr, memory access instructions include load instructions (i.e., **lb**, **lh**, **ld**, **lw**, **lbu**, **lhu**, **lwu**), and store instructions (i.e., **sb**, **sh**, **sw**, **sd**). These instructions take an integer as a raw address, and load or store a value from/to this address. In Capstone-RISC-V, these instructions are extended to take a capability as an address.

7.1.1. Load Instructions

▼ **Note:** **size** of load instructions

The **size** used in this sections is the size (in bytes) of the integer being loaded.

Mnemonic	size
lb	1
lbu	1
lh	2
lhu	2
lw	4
lwu	4
ld	8

Normal world integer encoding mode

When **cwrl** is 0 (normal world) and **emode** is 0 (integer encoding mode), RV64IZicsr load instructions behave the same as in RV64IZicsr, except that the following adjustments are made to these instructions:

- A **Load access fault** (5) exception is raised if the address to be accessed (i.e., **x[rs1]** +

`imm` is within the range (`SBASE - size, SEND`).

Secure world or normal world capability encoding mode

RV64IZicsr load instructions are modified to load integers of different sizes using capabilities, when `cwrl` is 1 (secure world), or when `cwrl` is 0 (normal world) and `emode` is 1 (capability encoding mode).

An exception is raised when any of the following conditions is met:

- Unexpected operand type (24)
 - `x[rs1]` is not a capability.
- Invalid capability (25)
 - `x[rs1].valid` is 0 (invalid).
- Unexpected capability type (26)
 - `x[rs1].type` is not 0 (linear), 1 (non-linear), 5 (sealed-return), or 6 (exit).
 - `x[rs1].type` is 5 (sealed-return) and `x[rs1].async` is not 0 (synchronous).
- Insufficient capability permissions (27)
 - `x[rs1].type` is 0 (linear) or 1 (non-linear) and $4 \leq p$ `x[rs1].perms` does not hold.
- Capability out of bound (28)
 - `x[rs1].type` is 0 (linear) or 1 (non-linear), and `x[rs1].cursor + imm` is not in the range `[x[rs1].base, x[rs1].end - size]`.
 - `x[rs1].type` is 5 (sealed-return) or 6 (exit), and `x[rs1].cursor + imm` is not in the range `[x[rs1].base + 3 * CLENBYTES, x[rs1].base + 33 * CLENBYTES - size]`.
- Load address misaligned (4)
 - `x[rs1].cursor + imm` is not aligned to `size` bytes.




Figure 32. *lb* instruction format in secure world or normal world capability encoding mode




Figure 33. *lh* instruction format in secure world or normal world capability encoding mode




Figure 34. *lw* instruction format in secure world or normal world capability encoding mode




Figure 35. ld instruction format in secure world or normal world capability encoding mode

If no exception is raised:

- Load the content at the memory location $[x[rs1].cursor + imm, x[rs1].cursor + imm + size)$ as a signed integer to $x[rd]$.




Figure 36. lbu instruction format in secure world or normal world capability encoding mode




Figure 37. lhu instruction format in secure world or normal world capability encoding mode




Figure 38. lwu instruction format in secure world or normal world capability encoding mode

If no exception is raised:

- Load the content at the memory location $[x[rs1].cursor + imm, x[rs1].cursor + imm + size)$ as an unsigned integer to $x[rd]$.

7.1.2. Store Instructions

▼ Note: **size** of store instructions

The **size** used in this sections is the size (in bytes) of the integer being stored.

Mnemonic	size
sb	1
sh	2
sw	4
sd	8

Normal world integer encoding mode

When **cwrl**d is 0 (normal world) and **emode** is 0 (integer encoding mode), RV64IZicsr store instructions behave the same as in RV64IZicsr, except that the following adjustments are made to these instructions:

- A **Store/AMO access fault(7)** exception is raised if the address to be accessed (i.e., $x[rs1] + imm$) is within the range ($SBASE - size, SEND$).

Secure world or normal world capability encoding mode

RV64IZicsr store instructions are modified to store integers of different sizes using capabilities, when **cwrl** is 1 (secure world), or when **cwrl** is 0 (normal world) and **emode** is 1 (capability encoding mode).




Figure 39. sb instruction format in secure world or normal world capability encoding mode




Figure 40. sh instruction format in secure world or normal world capability encoding mode




Figure 41. sw instruction format in secure world or normal world capability encoding mode




Figure 42. sd instruction format in secure world or normal world capability encoding mode

An exception is raised when any of the following conditions is met:

- **Unexpected operand type (24)**
 - $x[rs1]$ is not a capability.
 - $x[rs2]$ is not an integer.
- **Invalid capability (25)**
 - $x[rs1].valid$ is 0 (invalid).
- **Unexpected capability type (26)**
 - $x[rs1].type$ is not 0 (linear), 1 (non-linear), 3 (uninitialised), 5 (sealed-return), or 6 (exit).
 - $x[rs1].type$ is 5 (sealed-return) and $x[rs1].async$ is not 0 (synchronous).
- **Insufficient capability permissions (27)**
 - $x[rs1].type$ is 0 or 1, and $2 \leq x[rs1].perms$ does not hold.
- **Illegal operand value (29)**
 - $x[rs1].type$ is 3 (uninitialised) and imm is not 0.
- **Capability out of bound (28)**

- `x[rs1].type` is 0, 1, or 3, and `x[rs1].cursor + imm` is not in the range `[x[rs1].base, x[rs1].end - size]`.
- `x[rs1].type` is 5 or 6, and `x[rs1].cursor + imm` is not in the range `[x[rs1].base + 3 * CLENBYTES, x[rs1].base + 33 * CLENBYTES - size]`.
- Store/AMO address misaligned (6)
 - `x[rs1].cursor + imm` is not aligned to `size` bytes.

If no exception is raised:

1. Store `x[rs2]` to the memory location `[x[rs1].cursor + imm, x[rs1].cursor + imm + size)` as an integer.
2. If `x[rs1].type` is 3 (uninitialised), set `x[rs1].cursor` to `x[rs1].cursor + size`.

7.2. Control Flow Instructions

In RV64IZicsr, conditional branch instructions (i.e., `beq`, `bne`, `blt`, `bge`, `bltu`, and `bgeu`), and unconditional jump instructions (i.e., `jal` and `jalr`) are used to control the flow of execution. In Capstone-RISC-V, these instructions are adjusted to support the situation where the program counter is a capability.

7.2.1. Branch Instructions




Figure 43. `beq` instruction format




Figure 44. `bne` instruction format




Figure 45. `blt` instruction format




Figure 46. `bge` instruction format




Figure 47. `bltu` instruction format




Figure 48. bgeu instruction format

The following adjustments are made to these instructions:

- When `cwrl` is 1 (secure world), `pc.cursor`, instead of `pc`, is changed by the instruction.

7.2.2. Jump Instructions




Figure 49. jal instruction format




Figure 50. jalr instruction format

The following adjustments are made to these instructions:

- When `cwrl` is 1 (secure world), `pc.cursor + 4`, instead of `pc + 4`, is written to `x[rd]`.
- When `cwrl` is 1 (secure world), `pc.cursor`, instead of `pc`, is changed by the instruction.

7.3. Illegal Instructions

Some instructions in RV64IZicsr now raise `illegal instruction (2)` exceptions when executed in the secure world, under all or some circumstances.

These instructions are:

- All instructions defined in the [privileged ISA](#) of RV64IZicsr.
- All instructions defined in the [Zicsr extension](#), namely instructions that directly access CSRs, when the CSR specified is not [one defined in Capstone-RISC-V](#), or when the [read/write constraints](#) are not satisfied.
- `ecall`.
- `ebreak`.

8. Interrupts and Exceptions

8.1. Exception and Exit Codes

▼ **Note:** where are the exception codes relevant?

For Capstone-RISC-V, there are three places where exception codes are relevant:

1. **Handleable Exception:** The argument to pass to the *exception handler domain*.
2. **Unhandleable Exception:** The value returned to the CAPENTER instruction in the user process.
3. **Interrupt:** The exception code that the OS sees.

The argument passed to the *exception handler domain* will be in the register `cra` and `a0`, and the exit code the user process receives will be in the register specified by `exit_reg`.

The *exception code* is what the *exception handler domain* receives as an argument when an exception occurs in the secure world. It is an integer value that indicates what the type of the exception is.

Capstone-RISC-V also has *exit codes*, which are the values returned to the CAPENTER instruction in case the exception cannot be handled in the secure world.

We define the exception code and the exit code for each type of exception below. It aligns with the exception codes defined in RV64IZicsr, where applicable, for ease of implementation and interoperability.

Table 9. Exception codes and exit codes

Exception	Exception code	Exit code
Instruction address misaligned	0	1
Instruction access fault	1	1
Illegal instruction	2	1
Breakpoint	3	1
Load address misaligned	4	1
Load access fault	5	1
Store/AMO address misaligned	6	1
Store/AMO access fault	7	1
Unexpected operand type	24	1
Invalid capability	25	1
Unexpected capability type	26	1
Insufficient capability permissions	27	1

Exception	Exception code	Exit code
Capability out of bound	28	1
Illegal operand value	29	1
Insufficient system resources	30	1

For interrupts, the same encodings as in RV64IZicsr are used.

▼ **Note: exit code**

Currently, we use the same exit code **1** for all exception types to protect the confidentiality of the secure world execution.

▼ **Note: implementation specified exception**

For some of the exception code, where the corresponding exception is raised is not specified as part of the ISA specification. Instead, it is up to the implementation to decide where to raise the exception. These exceptions include:

- **Insufficient system resources (30)**

8.2. Exception Data

For the secure world, the exception-related data is stored in the **tval** CSR, similar to RV64IZicsr. The exception handler can use the value to decide how to handle the exception. However, such data is available *only* for in-domain exception handling, where the exception handling process does not involve a domain switch.

▼ **Note: tval is only available in in-domain exception handling**

For exception handling that crosses domain (i.e., when **ceh** is a valid sealed capability) or world boundaries (i.e., when the normal world ends up handling the exception), the exception data (i.e., the data in **tval**) is not available. This is to protect the confidentiality of domain execution. Note that this design does not stop the excepted domain from selectively trusting a different domain with such data.

For exceptions defined in RV64IZicsr, the same data as in it is written to **tval**. For the added exceptions, the following data is written to **tval**:

Table 10. Exception data for the added exceptions in the secure world

Exception	Data
Unexpected operand type (24)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)
Invalid capability (25)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)

Exception	Data
Unexpected capability type (26)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)
Insufficient capability permissions (27)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)
Capability out of bound (28)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)
Illegal operand value (29)	The instruction itself (or the lowest XLEN bits if it is wider than XLEN)

8.3. Handling of Secure-World Interrupts

▼ Note: overview of interrupt handling in the secure world

For interrupts, in order to prevent denial-of-service attacks by the secure world (e.g. a timer interrupt), the processor core needs to always transfer the control back to the normal world safely.

The interrupt will be translated to one in the normal world that occurs at the CAPENTER instruction used to enter the secure world.

Since interrupts are typically relevant only to the management of system resources, the interrupt should be transparent to both the secure world and the user process in the normal world. In other words, the secure world will simply resume execution from where it was interrupted after the interrupt is handled by the normal-world OS.

When an interrupt occurs in the secure world, the processor core directly saves the full context, scrubs it, and exits to the normal world. It then generates a corresponding interrupt in the normal world, and follows the normal-world interrupt handling process thereafter.

The figure below shows the overview of interrupt handling in Capstone-RISC-V.

Normal World

Secure World

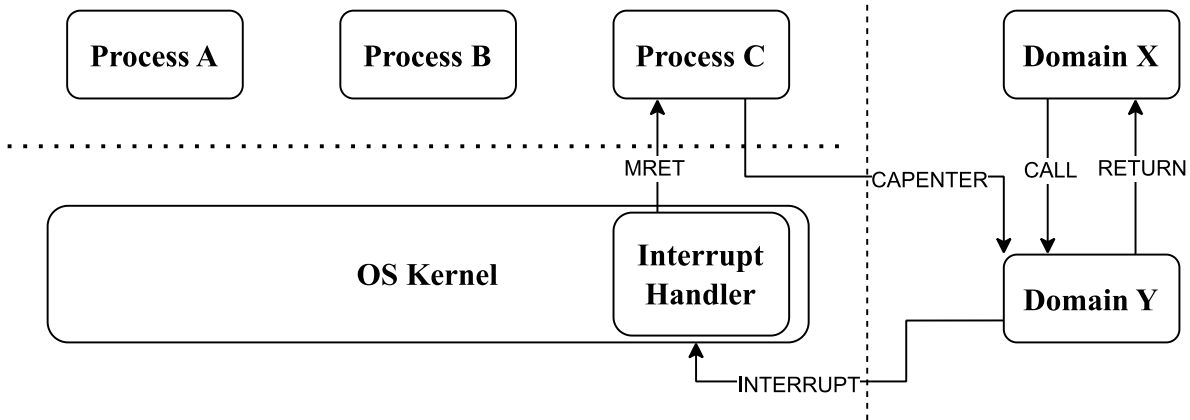


Figure 51. Overview of interrupt handling in Capstone-RISC-V

If the content in `switch_cap` satisfies the following conditions:

- `switch_cap.valid` is 1 (valid).
- `switch_cap.type` is 0 (linear) or 3 (uninitialised).
- `switch_cap.base` is aligned to `CLENBYTES`.
- $6 \leq \text{switch_cap.perms}$ holds.
- $\text{switch_cap.end} - \text{switch_cap.base} \geq \text{CLENBYTES} * 33$ holds.

1. Store `pc` to the memory location `[switch_cap.base, switch_cap.base + CLENBYTES)`.
2. Store `ceh` to the memory location `[switch_cap.base + CLENBYTES, switch_cap.base + 2 * CLENBYTES)`, and write `cnull` to `ceh`.
3. For $i = 1, 2, \dots, 31$, store the content of `x[i]` to the memory location `[switch_cap.base + (i + 1) * CLENBYTES, switch_cap.base + (i + 2) * CLENBYTES)`.
4. Load the program counter `pc` and the stack pointer `sp` from `normal_pc` and `normal_sp` respectively.
5. Set `switch_cap.type` to 4 (sealed), `switch_cap.async` to 2 (upon interrupt).
6. Write `switch_cap` to the register `x[switch_reg]`, and `cnull` to `switch_cap`.
7. Scrub the other general-purpose registers (i.e., write `zero` to `x[i]` where $i \neq 2$ and $i \neq \text{switch_reg}$).
8. Set the `cwld` register to 0 (normal world).
9. Trigger an interrupt in the normal world.

Otherwise:

1. Load the program counter `pc` and the stack pointer `sp` from `normal_pc` and `normal_sp` respectively.
2. Write `cnull` to `x[switch_reg]`.
3. Scrub the other general-purpose registers (i.e., write `zero` to `x[i]` where `i != 2` and `i != switch_reg`).
4. Set the `cwrlld` register to `0` (normal world).
5. Trigger an interrupt in the normal world.

Note that in this case, there will be another exception in the normal world when the user process resumes execution after the interrupt has been handled by the OS, due to the invalid `switch_cap` value written to the CAPENTER operand.

8.4. Handling of Secure-World Exceptions

▼ Note: overview of exception handling in the secure world

For exceptions, we want to give the secure world the chance to handle them first. If the secure world manages to handle the exception, the normal world will not be involved. The end result is that the whole exception or its handling is not even visible to the normal world.

If the secure world fails to handle an exception, such as when `ceh` is not a valid sealed capability), however, the normal world will take over.

The exception will **not** be translated into an exception in the normal world, but instead indicated in the *exit code* that the CAPENTER instruction in the user process receives. The user process can then decide what to do based on the exit code (e.g., terminate the domain in the secure world).

When an exception occurs, the processor core first attempts to handle the exception in the secure world. If this fails, the processor core saves the full context if it can and exits to the normal world with a proper error code.

The figure below shows the overview of exception handling in Capstone-RISC-V.

Normal World

Secure World

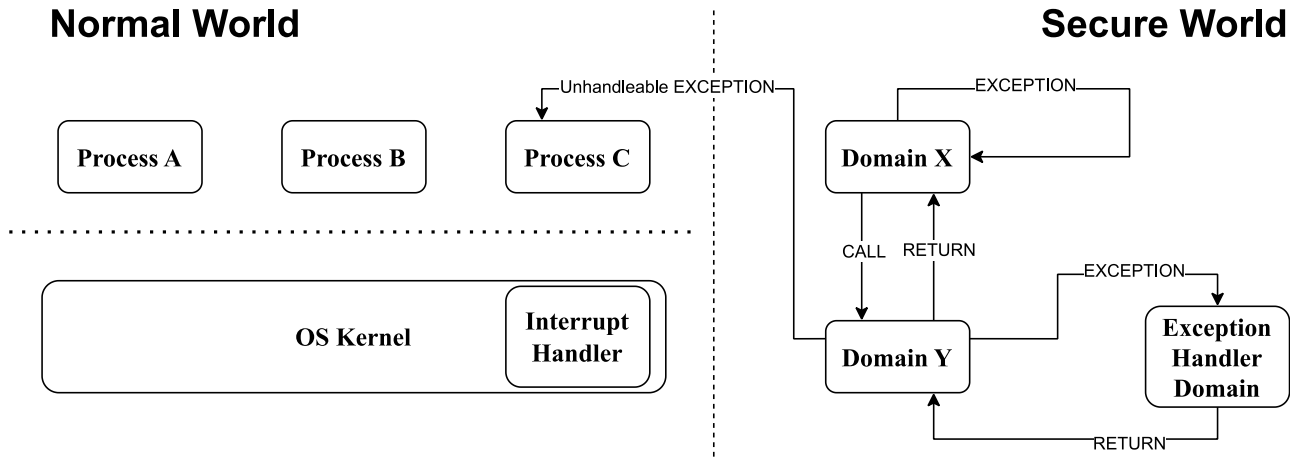


Figure 52. Overview of exception handling in Capstone-RISC-V

If the content in `ceh` satisfies the following conditions:

- `ceh.type` is 4 (sealed).
- `ceh.valid` is 1 (valid).
- `ceh.async` is 0 (synchronous)

1. Swap `pc` with the content at memory location `[ceh.base, ceh.base + CLENBYTES)`.
2. For $i = 1, 2, \dots, 31$, swap `x[i]` with the content at the memory location `[ceh.base + (i + 1) * CLENBYTES, ceh.base + (i + 2) * CLENBYTES)`.
3. Set the `ceh.type` to 5 (sealed-return), `ceh.cursor` to `ceh.base`, and `ceh.async` to 1 (upon exception).
4. Write `ceh` to the register `cra`, and `cnull` to the register `ceh`.
5. Swap `ceh` with the content at the memory location `[cra.base + CLENBYTES, cra.base + 2 * CLENBYTES)`.
6. Write the exception code to the register `a0`.

If the content in `ceh` is a valid *executable* non-linear capability or linear capability:

1. Write `pc` to `epc`.
2. Write `ceh` to `pc`. If `ceh.type != 1`, write `cnull` to `ceh`.
3. Write the exception code to `cause`.
4. Write extra exception data to `tval`.

Otherwise:

If the content in `switch_cap` satisfies the following conditions:

- `switch_cap.valid` is 1 (valid).
- `switch_cap.type` is 0 (linear) or 3 (uninitialised).
- `switch_cap.base` is aligned to `CLENBYTES`.
- $6 \leq \text{switch_cap.perms}$ holds.
- $\text{switch_cap.end} - \text{switch_cap.base} \geq \text{CLENBYTES} * 33$ holds.

1. Store the current value of the program counter (`pc`) to the memory location `[switch_cap.base, switch_cap.base + CLENBYTES)`.
2. Store `ceh` to the memory location `[switch_cap.base + CLENBYTES, switch_cap.base + 2 * CLENBYTES)`, and write `null` to `ceh`.
3. For $i = 1, 2, \dots, 31$, store the content of `x[i]` to the memory location `[switch_cap.base + (i + 1) * CLENBYTES, switch_cap.base + (i + 2) * CLENBYTES)`.
4. Load the program counter `pc` and the stack pointer `sp` from `normal_pc` and `normal_sp` respectively.
5. Write `normal_pc + 4` and `normal_sp` to `pc` and `sp` respectively.
6. Set `switch_cap.type` to 4 (sealed), `switch_cap.async` to 1 (upon exception).
7. Write the content of `switch_cap` to `x[switch_reg]`, and `null` to `switch_cap`.
8. Scrub the other general-purpose registers (i.e., write `zero` to `x[i]` where $i \neq 2$ and $i \neq \text{switch_reg}$).
9. Write the exit code to `x[exit_reg]`.
10. Set the `cwrlld` register to 0 (normal world).

Otherwise:

1. Write `normal_pc + 4` and `normal_sp` to `pc` and `sp` respectively.
2. Write `null` to `x[switch_reg]`.
3. Scrub the other general-purpose registers (i.e., write `zero` to `x[i]` where $i \neq 2$ and $i \neq \text{switch_reg}$).
4. Write the exit code to `x[exit_reg]`.
5. Set the `cwrlld` register to 0 (normal world).

▼ Note: comparison between synchronous and asynchronous exit

Compare this with [CAPEXIT](#). We require that CAPEXIT be provided with a valid sealed-return capability rather than use the latent capability in `switch_cap`. This allows us to enforce containment of domains in the secure world, so that a domain is prevented from escaping from the secure world when such a behaviour is undesired.

Appendix A: Instruction Listing

A.1. Capstone Instructions




Figure 53. Instruction format: R-type




Figure 54. Instruction format: I-type




Figure 55. Instruction format: S-type




Figure 56. Instruction format: RI-type

Table 11. Capability manipulation instructions

Mnemonic	Sail model	Format	Func3	Func7	rs1	rs2	rd	imm [4:0]	imm[11:0]	World
REVOKE	link	R	001	0000000	C	-	-	-	-	*
SHRINK	link	R	001	0000001	I	I	C	-	-	*
TIGHTEN	link	RI	001	0000010	C	-	C	Z	-	*
DELIN	link	R	001	0000011	-	-	C	-	-	*
LCC	link	RI	001	0000100	C	-	I	Z	-	*
SCC	link	R	001	0000101	C	I	C	-	-	*
SPLIT	link	R	001	0000110	C	I	C	-	-	*
SEAL	link	R	001	0000111	C	-	C	-	-	*
MREV	link	R	001	0001000	C	-	C	-	-	*
INIT	link	R	001	0001001	C	I	C	-	-	*
MOVC	link	R	001	0001010	C	-	C	-	-	*
DROP	link	R	001	0001011	C	-	-	-	-	*
CINCOFFSET	link	R	001	0001100	C	I	C	-	-	*
CINCOFFSETIMM	link	I	010	-	C	-	C	-	S	*

Table 12. Memory access instructions

Mnemonic	Sail model	Format	emode	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
LDC	link	I	0	011	-	I	-	C	S	N
		I	1	011	-	C	-	C	S	N
		I	-	011	-	C	-	C	S	S
STC	link	S	0	100	-	I	C	-	S	N
		S	1	100	-	C	C	-	S	N
		S	-	100	-	C	C	-	S	S

Table 13. Control flow instructions

Mnemonic	Sail model	Format	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
CALL	link	R	001	0100000	C	-	C	-	S
RETURN	link	R	001	0100001	C	I	-	-	S
CJALR	link	I	101	-	C	-	C	S	S
CBNZ	link	I	110	-	I	-	C	S	S
CAPENTER	link	R	001	0100010	C	-	I	-	N
CAPEXIT	link	R	001	0100011	C	I	-	-	S

Table 14. Control and status instructions

Mnemonic	Sail model	Format	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
CCSRRW	link	I	111	-	C	-	C	Z	*

A.2. Extended RV64IZicsr Memory Access Instructions




Figure 57. Instruction format: I-type




Figure 58. Instruction format: S-type

Table 15. Extended RV64IZicsr load instructions

Mnemonic	Format	emode	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
lb	I	0	000	-	I	-	I	S	N
	I	1	000	-	C	-	I	S	N
	I	-	000	-	C	-	I	S	S
lh	I	0	001	-	I	-	I	S	N
	I	1	001	-	C	-	I	S	N

Mnemonic	Format	emode	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
	I	-	001	-	C	-	I	S	S
lw	I	0	010	-	I	-	I	S	N
	I	1	010	-	C	-	I	S	N
	I	-	010	-	C	-	I	S	S
ld	I	0	011	-	I	-	I	S	N
	I	1	011	-	C	-	I	S	N
	I	-	011	-	C	-	I	S	S
lbu	I	0	100	-	I	-	I	S	N
	I	1	100	-	C	-	I	S	N
	I	-	100	-	C	-	I	S	S
lhu	I	0	101	-	I	-	I	S	N
	I	1	101	-	C	-	I	S	N
	I	-	101	-	C	-	I	S	S
lwu	I	0	110	-	I	-	I	S	N
	I	1	110	-	C	-	I	S	N
	I	-	110	-	C	-	I	S	S

Table 16. Extended RV64I Zicsr store instructions

Mnemonic	Format	emode	Func3	Func7	rs1	rs2	rd	imm[11:0]	World
sb	S	0	000	-	I	I	-	S	N
	S	1	000	-	C	I	-	S	N
	S	-	000	-	C	I	-	S	S
sh	S	0	001	-	I	I	-	S	N
	S	1	001	-	C	I	-	S	N
	S	-	001	-	C	I	-	S	S
sw	S	0	010	-	I	I	-	S	N
	S	1	010	-	C	I	-	S	N
	S	-	010	-	C	I	-	S	S
sd	S	0	011	-	I	I	-	S	N
	S	1	011	-	C	I	-	S	N
	S	-	011	-	C	I	-	S	S

▼ Note: the meaning of abbreviations in the table

For instruction operands:

I

Integer register

C

Capability register

-

Not used

For immediates:

S

Sign-extended

Z

Zero-extended

-

Not used

For worlds:

N

Normal world

S

Secure world

Either world

Appendix B: Comparison with Other Capability-Based ISA Extensions to RISC-V

Similar to Capstone-RISC-V, CHERI-RISC-V [1] and CHERIot [2] are also capability-based ISA extension to RISC-V, both derived from the CHERI architecture. CHERI-RISC-V is designed for general-purpose computing, whereas CHERIot builds on RV32E and specialises in low-cost embedded systems such as IoT devices.

We discuss the commonalities and differences between Capstone-RISC-V, CHERI-RISC-V, and CHERIot in this appendix, in the hope to shed light on how to allow Capstone-RISC-V to coexist with the other two ISA extensions in the RISC-V ecosystem.

B.1. Commonalities

Capstone-RISC-V, CHERI-RISC-V, and CHERIot all use architectural capabilities to allow capabilities to be stored in either registers or memory, with hardware-enforced provenance and monotonicity guarantees as well as bounds checks on capability dereferences. As a result, some of the instructions in the three ISAs have obvious and direct correspondence, as summarised in the following table.

Table 17. Correspondence between Capstone-RISC-V, CHERI-RISC-V, and CHERIot instructions

Capstone-RISC-V instruction(s)	CHERI-RISC-V instruction(s)	CHERIot instruction(s)
DROP	CClearTag	CClearTag
CJALR	CJALR	CJALR
CALL	CInvoke	-
SEAL	CSealEntry	-
CIncOffset	CIncOffset	CIncAddr
CIncOffsetImm	CIncOffsetImm	CIncAddrImm
LCC	CGetAddr, CGetBase, CGetType, CGetPerm	CGetAddr, CGetBase, CGetTop, CGetType, CGetPerm
SCC	CSetAddr	CSetAddr
TIGHTEN	CAndPerm	CAndPerm
SHRINK	CSetBounds, CSetBoundsExact	CSetBounds, CSetBoundsExact
MOVC	CMove	CMove
LDC	LC.CAP, LC.DDC, CLC	CLC
STC	SC.CAP, LC.DDC, CSC	CSC
L[BHWD]	L[BHWD][U].CAP	L[BHWD][U]
S[BHWD]	S[BHWD][U].CAP	S[BHWD][U]
CCSRRW	CSpecialRW	CSpecialRW

Most of the shared instructions are the ones for capability manipulations, as a result of having similar capability fields across the three ISA extensions. The basic use of capabilities, namely, explicit capability-based memory accesses, is also common in all three ISA extensions.

B.2. Differences

The differences stem from the different sets of extra features and capability types supported by the ISA extensions. For example, Capstone-RISC-V supports linear capabilities and revocation through revocation capabilities that are found in neither CHERI-RISC-V nor CHERIOT. Moreover, CHERIOT does not support hybrid-mode memory accesses that use raw addresses in place of explicit capabilities, or domain switches that involve atomic swapping of sealed execution contexts, and hence lacks the relevant instructions.

While Capstone-RISC-V and CHERI-RISC-V both have hybrid mode support, they adopt different models, with Capstone-RISC-V using a two-world model that aligns with its high-level goal of isolating pure capability code from privileged legacy code. Sealed capabilities in Capstone-RISC-V are also different from those in CHERI-RISC-V and CHERIOT. Capstone-RISC-V uses sealed capabilities exclusively for protecting domain execution contexts, allowing unsealing only upon domain switching, whereas the other two ISA extensions find more generic use for them and allow software to unseal them explicitly through an instruction.

The feature sets of the three ISA extensions are summarised in the table below.

Table 18. Feature sets of Capstone-RISC-V, CHERI-RISC-V, and CHERIOT

Feature	Capstone-RISC-V	CHERI-RISC-V	CHERIOT
Linear capabilities	Y	-	-
Revocation	Revocation capabilities with tracked derivation	Local capabilities	Local capabilities, revocation bits bound to object memory locations, local capabilities
Capability load	Anyone can load capabilities	<code>Permit_Load_Capability</code> required	<code>Permit_Load_Capability</code> required
Capability store	Anyone can store capabilities	<code>Permit_Store_Capability</code> or <code>Permit_Store_Local_Capability</code> required	<code>Permit_Store_Capability</code> or <code>Permit_Store_Local_Capability</code> required
Memory zeroing	Uninitialised capabilities	-	-
Software-defined fields	-	Y	Y
Hybrid mode	Separate normal and secure worlds, with MMU for integer address accesses in normal world	Default data capability for integer address accesses	-

Feature	Capstone-RISC-V	CHERI-RISC-V	CHERIoT
Explicit sealing	Anyone can seal	<code>Permit_Seal</code> required	<code>Permit_Seal</code> required
Implicit sealing upon domain switching	Y	-	-
Explicit unsealing	-	Matching <code>otype</code> and <code>Permit_Unseal</code> required	Matching <code>otype</code> and <code>Permit_Unseal</code> required
Implicit unsealing upon domain switching	Anyone can perform domain switching	Matching <code>otype</code> and <code>Permit_CInvoke</code> sealed entry capabilities for code and data required	-

Bibliography

- [1] Robert N M Watson, Peter G Neumann, Jonathan Woodruff, Michael Roe, Hesham Almatary, Jonathan Anderson, John Baldwin, Graeme Barnes, David Chisnall, Jessica Clarke, Brooks Davis, Lee Eisen, Nathaniel Wesley Filardo, Richard Grisenthwaite, Alexandre Joannou, Ben Laurie, A Theodore Markettos, Simon W Moore, Steven J Murdoch, Kyndylan Nienhuis, Robert Norton, Alexander Richardson, Peter Rugg, Peter Sewell, Stacey Son, and Hongyan Xia. Capability Hardware Enhanced RISC Instructions: CHERI Instruction-Set Architecture (Version 8).
- [2] Saar Amar, Tony Chen, David Chisnall, Felix Domke, Nathaniel Wesley Filardo, Kunyan Liu, Robert M Norton, Yucong Tao, Robert N M Watson, and Hongyan Xia. CHERIoT: Rethinking security for low-cost embedded systems.